

Nigel Bates D.B.A.
Monger Mounts®


©All Rights Reserved

Installation Instructions



**FOR MONGER MOUNT APPLICATIONS
ALWAYS CUT STRUT BETWEEN SLOTS**




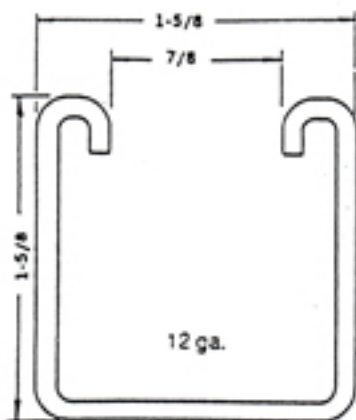


NYLON CONE NUT

For all 1-5/8" channel,
regardless of depth.



back-to-back channels

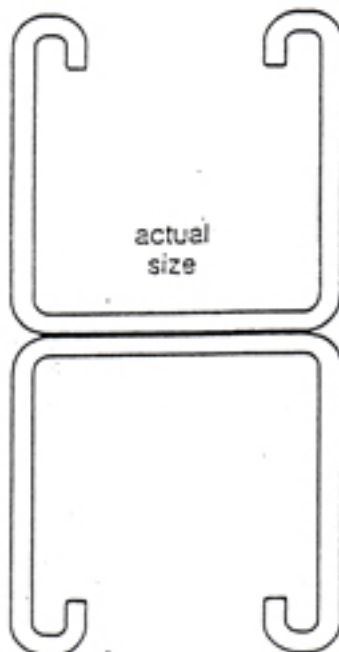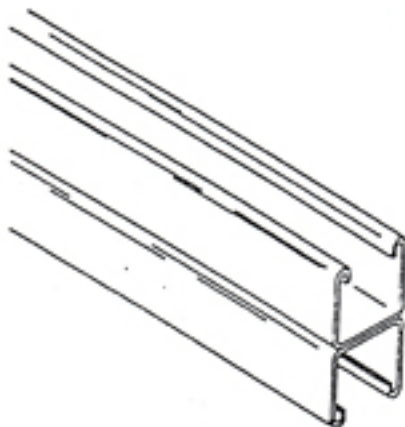

Back to back and combination channels provide greater flexibility and strength that may be needed in some areas of construction and maintenance.

Multiple channel sections are made from single channels spot welded or arc welded together.

AB-866




1/2" PIPE THREAD

THE AB-866 FITTINGS FIT IN THE CHANNEL SLOT SO YOU CAN ATTACH OUTLET BOXES FACING FORWARD OR TO THE SIDE WITH AN AB-887 OR AB-888

AB-887

SINGLE OUTLET

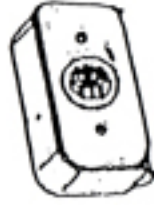

Complete unit including housing, standard **SINGLE** 3-wire, 15 Amp., NEMA ground receptacle and cover plate.

AB-888

DUPLEX OUTLET



Complete unit including housing, standard **DUPLEX** 3-wire, 15 Amp., 125 volt, NEMA ground receptacle and cover plate.

